





Audio System

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
A17		36		R2	A	37		S16		39	
C6		36		R3	B	37		S17		39	
J1	A	37		R9	C	37		S20		37	
J2	B	37		S1		35		T9		39	
J4	A	37		S7		37		T10		39	
J5	B	37		S14		39					
J7		37		S15		39					

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1M	25	
1S		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC1	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
IE1	42	Engine Room Main Wire and Instrument Panel Wire (Behind of the Combination Meter)
IE2		
IH1	43	Engine Wire and Instrument Panel Wire (Cowl Side Panel RH)
II2	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IJ1	43	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
IL1	43	Console Box Wire and Instrument Panel Wire (Under the Console Box)

: Ground Points

Code	See Page	Ground Points Location
ED	40	Front Left Side of the Cylinder Head
IG	42	Instrument Panel Brace LH

